

Vacless SVRS Maintenance and Testing Procedure

1. Maintenance (Use Kit P/N VAC55):
 - a) Check to insure the piston (1) is functioning properly by pushing the piston protruding pin (2) few times. The piston should move freely with reasonable finger pushes.
 - b) For sluggish piston; lubricate the piston O-ring using the provided lubrication dropper bottle P/N VAC50 by squeezing few drops equally spaced thru the small perforations (3) and evenly spread the lubricant to wet the O-ring by cycling (pushing) the piston several times.
 - c) Repeat step "a". If the piston is still sluggish or sticking, remove the valve from the pump, remove the two screws (4); disassemble the cap (5), remove the piston from the cap, clean & lubricate the piston O-ring, clean & lube the inside of the cap, reinstall the spring and reassemble the valve using fresh Teflon tape or Teflon paste (if needed).
 - d) Repeat step a. If the piston is still sluggish or sticking, please call Vacless technical support at (818)701-6200.
 - e) During the pool floor vacuuming use the provided red plug to maintain the cleaner's elevated vacuum level. Start the pump then install the plug after the piston is depressed.
2. Testing:
 - a) After servicing as shown above, perform monthly tests per the device "Users Manual" paragraph #6

*** The red plug must be removed after vacuuming.**

